



RedKnows MiniFinder LIVE

APPENDIX TO USER MANUAL

The MiniFinder LIVE which you have purchased is part of the MiniFinder product family, but some of the functions are not specified in the basic user manual. This manual addition only describes the specific functions of the MiniFinder LIVE.

Axtech AB

S:t Jörgens väg 4, 422 49 Hisings Backa, tel. +46(0)31-558866, e-mail: info@axtech.se
www.redknows.com

The MiniFinder is a product family of traceable alarms which alarms if they moves (geofence) or get disturbed (vibration). The MiniFinder sends an SMS alert to your cell phone if your property is disturbed or moved. You can follow the stolen property in a map on your mobile phone display, or choose to see a larger map at www.redknows.com. You can send an SMS to the MiniFinder whenever you want to receive updated position and status.

MiniFinder LIVE

MiniFinder LIVE is a traceable alarm which sends its position regularly by GPRS to a map when it's moved. The LIVE-function is activated and starts to send positions at smallest vibration and stops to send when the unit been still for five minutes. Besides these functions MiniFinder-LIVE works similar as the basic MiniFinder which is described in the user manual attached in this package. This appendix only describes the LIVE-function.

Positions via GPRS

MiniFinders current position is sent via GPRS to the redKnows server. The positions are sent every 30 second and are presented on a map at your EZstart-account which you reach via www.redknows.se, this is where you also register your MiniFinder and send the information to the alarm. When you login to your account you reach a map. This map is limited and is only able to show **one** MiniFinder LIVE.

MiniFinder LIVE starts sending when it register a vibration and stops when it has been still for five minutes.

Costs

No extra subscription costs are charged besides the cost for GPRS traffic. MiniFinder is delivered with a SIM-card (prepaid card) prepared for GPRS. The SIM-card is loaded with 100 SEK. You can continue using this card or contact the operator and register the card as a subscription.

SIM-card

We recommend to use the SIM-card that is pre-mounted in MiniFinder. If you need to change the SIM-card because of poor GSM coverage we want you to contact Axtech for recommendations regarding the SIM-card. The card must always support GPRS.

Alarm functions

MiniFinder LIVE is used as a GPS-alarm when it's not moved, for instance in a parked motorcycle or boat (see the user manual). It's used constant installed connected to an external power source, or with the internal battery charged with 230V.

Activate/deactivate via SMS

As registered user you can send commands via SMS to MiniFinder LIVE:

SMS-text	What happens?
Liveoff	Your MiniFinder LIVE stops sending positions to the server
Liveon	Your MiniFinder LIVE starts sending positions - if it moves

Every time you shut off and restart your MiniFinder LIVE the LIVE-function will automatically be activated when the first vibration occurs, no matter the latest command.

Register and follow on map at www.redknows.com

Before you can start using MiniFinder LIVE you must register a personal account in EZ-start at www.redknows.com. From this account you send the configurations to your MiniFinder, and you will also find the map showing MiniFinders last known position.

For additional information regarding MiniFinder - see the user manual!